



EXR 124

DiSEqC™ switching matrix

Order no.: 20510054



- For switching between input signals from two satellites (multifeed system) or two subscriber outputs from different multiswitches in multifeed systems with three or four satellites
- By configuration (rotary switch), the switching is done optionally with the DiSEqC™ commands for Pos. A/B, Option A/B or Uncommitted Switch 1
- Cascading enables multifeed reception of three or four satellites
- Control signals (14/18 V, 0/22 kHz) and DiSEqC™ are switched through to the selected input. The second input is voltage-free
- For indoor installation
- 4 x 2 Sat IF inputs/one output (corresponds to 4 x EXR 121, e.g. for multifeed reception with 2 x UAS 585)
- Reception of the terrestrial range possible even when the receiver is switched off

Status 08/2023

Technische Daten / Technical Data:

Type:	EXR 124
Order no:	20510054
Subscriber lines:	4 x 1
Inputs:	1 x terr. (terr.) 4 x 2 x Sat IF (1A 2A 3A 4A / 1B 2B 3B 4B)
Throughput attenuation:	9/2 dB
Decoupling inputs:	-30 dB
Control with DiSEqC™:	Configurable for the DiSEqC™ commands
Current consumption per subscriber:	Type. 31 mA
Max. perm. Remote power supply current per subscriber connection:	350 mA
Voltage drop typ. (at 350 mA load):	0,28 V
Frequency range:	5-862 950-2150 MHz
Switch position 1:	Position A/B
Switch position 2:	Option A/B
Switch position 3:	"Uncommitted Switch" on/off
Nominal impedance:	75 Ω
Decoupling outputs:	25/40 dB
Connections:	F-Connectors
Zul. Ambient temperature:	-20 to +55 °C
Dimensions (W x H x D):	112 x 148 x 42 mm
Packaging unit/weight:	1 (10)/0.5 pcs./kg

Downloads

- [EXR 124 - Produktdatenblatt \(Version: 08/2023 - Größe: 128.27 KB\)](#)
- [EXR 124 - Bedienungsanleitung | User Manual \(Version: gb - Größe: 447.86 KB\)](#)



Produkt Galerie:

